

**Function test**

---

- 1 Switch ignition on and then off again, each time the operating noise of the idle speed shutoff valves should be clearly heard or should be felt with hand.
- 2 Run engine at idle speed. Pull plug (253) from one valve, engine speed should clearly drop or engine should start hunting. Check likewise at opposite valve.

**Leak test**

---

- 3 Run engine at idle speed. Simultaneously pull both plugs (253) from valves, engine should stop immediately without afterrunning. Replace shutoff valve, if required.

